
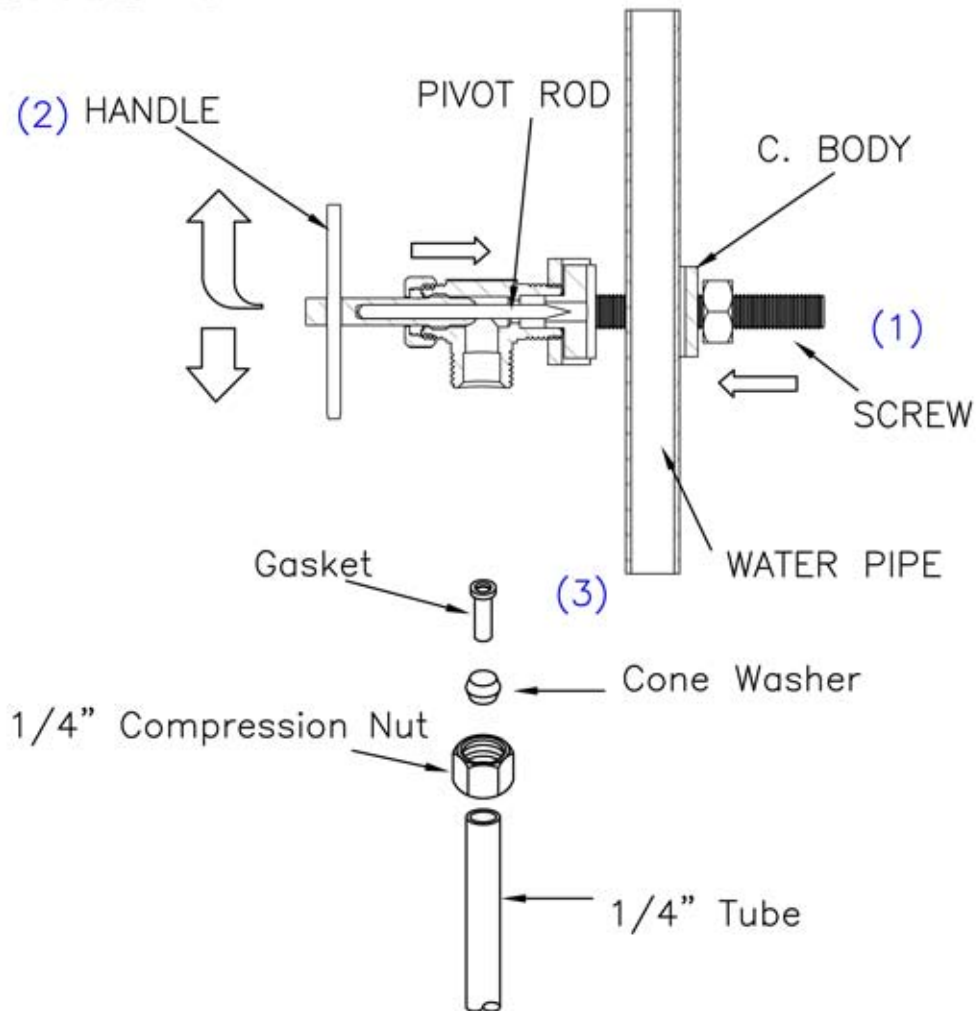


# SV-1LF

## INSTALLATION INSTRUCTION

- (1) Screw the water pipe tight
- (2) Revolve the handle to let the pivot rod puncture the water pipe.
- (3) Connect with filtered water pipe by gasket, cone washer and compression nut.

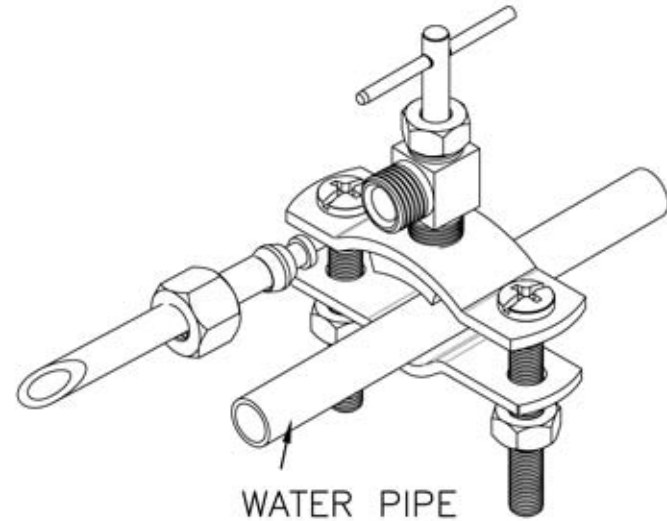

Connect to filtered water